

- 16 CHANNEL MODE**
- 0 POLYPHONIC
 - 1 PITCH ORDERED
 - 2 CHORD BUFFER
 - 3 ALL CHAN (POLY)
 - 4 ALL CHAN (MONO)
 - 5 LAST NOTE, S-TRIG
 - 6 LAST NOTE, M-TRIG
 - 7 FIRST NOTE
 - 8 BOTTOM NOTE
 - 9 TOP NOTE
 - 10 ARPEGGIO UP
 - 11 ARPEGGIO DOWN
 - 12 ARPEGGIO UP/DOWN
 - 13 ARPEGGIO DOWN/UP
 - 14 SEQUENCER
 - 15 RANDOM

KEYBOARD ALGORITHM

A

KEYBOARD ALGORITHM

B

- FOOTSWITCH MODE**
- | LEFT (LATCH) | RIGHT (SUSTAIN) |
|--------------|-----------------|
| 0 | ENABLED |
| 1 | ENABLED |
| 2 | DISABLED |
| 3 | DISABLED |
| 4 | NOTE GATE |
| 5 | NOTE GATE |
| 6 | - NOTE GATE |
| 7 | - NOTE GATE |

GLISS

RATE

GLIDE

MODE

- 0 POLY FREE-RUN
- 1 POLY KEY-TRIG
- 2 MONO FREE-RUN
- 3 MONO KEY-TRIG

RATE MOD

- 0 NONE
- 1 PRESSURE
- 2 KYBD
- 3 -KYBD
- 4 VELOCITY
- 5 -VELOCITY
- 6 ENV 2
- 7 -ENV 2
- 8 PEDAL 1
- 9 -PEDAL 1
- 10 PEDAL 2
- 11 -PEDAL 2
- 12 LEVER 1
- 13 -LEVER 1
- 14 LEVER 2
- 15 -LEVER 2

AMPL MOD

- 0 NONE
- 1 PRESSURE
- 2 KEYBOARD
- 3 -KEYBOARD
- 4 VELOCITY
- 5 -VELOCITY
- 6 ENV 2
- 7 ENV 1
- 8 PEDAL 1
- 9 PEDAL 2
- 10 LEVER 1
- 11 LEVER 2
- 12 0.85 Sec. DELAY
- 13 1.3 Sec. DELAY
- 14 2.6 Sec. DELAY
- 15 5.1 Sec. DELAY

WAVE SHAPE

WAVE SHAPE

MOD SELECT

- 0 KYBD GLIDE A
- 1 SWEEP A
- 2 ENV 1A
- 3 ENV 2A
- 4 KYBD GLIDE B
- 5 SWEEP B
- 6 ENV 1B
- 7 ENV 2B
- 8 LEVER 1
- 9 LEVER 2
- 10 PEDAL 1
- 11 PEDAL 2
- 12 VELOCITY
- 13 THRESH VEL
- 14 PRESSURE
- 15 THRESH PRESS

WIDTH

MOD DEPTH

GLISS

RATE

GLIDE

MODE

- 0 POLY FREE-RUN
- 1 POLY KEY-TRIG
- 2 MONO FREE-RUN
- 3 MONO KEY-TRIG

RATE MOD

- 0 NONE
- 1 PRESSURE
- 2 KYBD
- 3 -KYBD
- 4 VELOCITY
- 5 -VELOCITY
- 6 ENV 2
- 7 -ENV 2
- 8 PEDAL 1
- 9 -PEDAL 1
- 10 PEDAL 2
- 11 -PEDAL 2
- 12 LEVER 1
- 13 -LEVER 1
- 14 LEVER 2
- 15 -LEVER 2

WAVE SHAPE

WAVE SHAPE

MOD SELECT

- 0 KYBD GLIDE A
- 1 SWEEP A
- 2 ENV 1A
- 3 ENV 2A
- 4 KYBD GLIDE B
- 5 SWEEP B
- 6 ENV 1B
- 7 ENV 2B
- 8 LEVER 1
- 9 LEVER 2
- 10 PEDAL 1
- 11 PEDAL 2
- 12 VELOCITY
- 13 THRESH VEL
- 14 PRESSURE
- 15 THRESH PRESS

WIDTH

MOD DEPTH

PITCH

MOD 1 SELECT

MOD 2 SELECT

MOD 3 SELECT

TUNE

MOD 1 DEPTH

MOD 2 DEPTH

MOD 3 DEPTH

TUNE

RESO-NANCE

PITCH

MOD 1 SELECT

MOD 2 SELECT

MOD 3 SELECT

TUNE

MOD 1 DEPTH

MOD 2 DEPTH

MOD 3 DEPTH

TUNE

RESO-NANCE

PITCH

MOD 1 SELECT

MOD 2 SELECT

MOD 3 SELECT

TUNE

MOD 1 DEPTH

MOD 2 DEPTH

MOD 3 DEPTH

TUNE

RESO-NANCE

PITCH

MOD 1 SELECT

MOD 2 SELECT

MOD 3 SELECT

TUNE

MOD 1 DEPTH

MOD 2 DEPTH

MOD 3 DEPTH

TUNE

RESO-NANCE

ENVELOPE 1

ATTACK MOD

DECAY MOD

RELEASE

DELAY

AMPL TOUCH

FILTER

LP/HP

MOD 1 SELECT

MOD 2 SELECT

MOD 3 SELECT

MOD 1 DEPTH

MOD 2 DEPTH

MOD 3 DEPTH

ENVELOPE 1

ATTACK MOD

DECAY MOD

RELEASE

DELAY

AMPL TOUCH

FILTER

LP/HP

MOD 1 SELECT

MOD 2 SELECT

MOD 3 SELECT

MOD 1 DEPTH

MOD 2 DEPTH

MOD 3 DEPTH

ENVELOPE 2

ATTACK MOD

DECAY MOD

RELEASE

DELAY

AMPL TOUCH

VOLUME

MOD 1 SELECT

MOD 2 SELECT

MOD 3 SELECT

MOD 1 DEPTH

MOD 2 DEPTH

MOD 3 DEPTH

ENVELOPE 2

ATTACK MOD

DECAY MOD

RELEASE

DELAY

AMPL TOUCH

VOLUME

MOD 1 SELECT


MOD 2 SELECT

MOD 3 SELECT

MOD 1 DEPTH

MOD 2 DEPTH

MOD 3 DEPTH

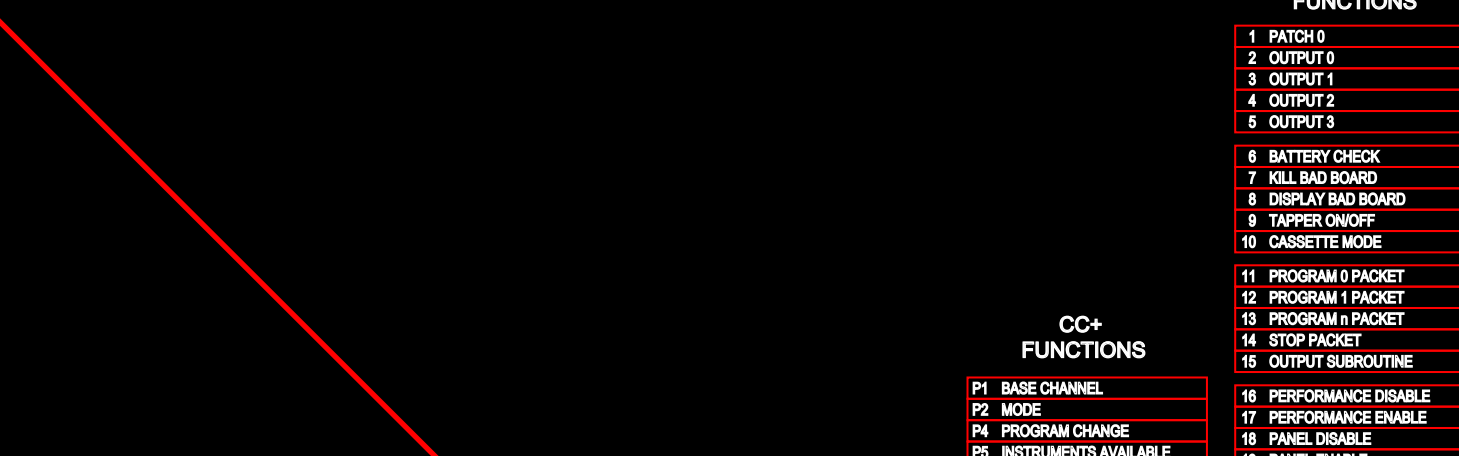

- SET SPLIT FUNCTIONS**
- 1 PATCH 0
 - 2 OUTPUT 0
 - 3 OUTPUT 1
 - 4 OUTPUT 2
 - 5 OUTPUT 3
 - 6 BATTERY CHECK
 - 7 KILL BAD BOARD
 - 8 DISPLAY BAD BOARD
 - 9 TAPPER ON/OFF
 - 10 CASSETTE MODE
 - 11 PROGRAM 0 PACKET
 - 12 PROGRAM 1 PACKET
 - 13 PROGRAM n PACKET
 - 14 STOP PACKET
 - 15 OUTPUT SUBROUTINE
 - 16 PERFORMANCE DISABLE
 - 17 PERFORMANCE ENABLE
 - 18 PANEL DISABLE
 - 19 PANEL ENABLE
 - 20 SEND PROGRAM
 - 21 ATTACK THRESHOLD
 - 22 RELEASE THRESHOLD
 - 23 RELEASE SLOW RATE
 - 24 RELEASE FAST RATE
 - 25 BRANCH SUBROUTINE
 - 26 MUTE A CHANNELS
 - 27 MUTE B CHANNELS
 - 28 UNMUTE
 - 29 MUTE OSCILLATORS
 - 30 TEST LEDs
 - 31 (SPECIAL RESET)
 - 32 (SPECIAL RESET #2)
 - 33 (SPECIAL RESET #3)
 - 34 PRESSURE DISABLE
 - 35 PRESSURE ENABLE
 - 36 CC+ PROG MODE ON/OFF
 - 37 CC+ VOICE ALLOCATION
 - 38 CC+ RANDOM PATCH
 - 39 CC+ CREATE SCRATCH PATCH
 - 40 CC+ AUTOTUNE INFO
 - 41 SYNTCH PRGM MODE
 - 42 SYNTCH CONFIG SYSX
 - 43 SYNTCH BANK SYSX
 - 44 SYNTCH MIDI PRGM 0
 - 45 SYNTCH MIDI PRGM 1
 - 46 SYNTCH MIDI PRGM 2
 - 47 SYNTCH MIDI PRGM 3
 - 48 SYNTCH MIDI PRGM 4
 - 49 SYNTCH MIDI PRGM 5
 - 50 RESET MAIN COMPUTER

CC+ FUNCTIONS

- P1 BASE CHANNEL
- P2 MODE
- P3 PROGRAM CHANGE
- P4 INSTRUMENTS AVAILABLE
- P5 PARAM CHANGE
- P6 LEVER 1 SELECT
- P7 LEVER 1 POLARITY
- P8 LEVER 2 SELECT
- P9 LEVER 2 POLARITY
- P10 PEDAL 1 SELECT
- P11 PEDAL 2 SELECT
- P12 FOOTSWITCH 2 SELECT
- P13 VOLUME SELECT
- P14 PARAM SLIDER SELECT
- P15 MIDI PRESSURE MODE
- P16 LOCAL CONTROL
- P17 MCM MODE SELECT
- P18 MCM EDIT
- P19 MCM INIT
- P20 MCM SYSX DUMP
- P21 CHROMA/EXPANDER SELECT
- P22 FIFTY PRGM SYSX DUMP
- P23 CONT. CONTROLLER MODE
- P24 SHOW VERSION
- P25 MIDI PRESSURE TX
- P26 SERIAL DISPLAY
- P27 SWEEP CLR SOURCE
- P28 MIDI TX VELOCITY TBL
- P29 AUTO-SEND MIDI CC
- P30 BANK SELECT: PRG SEL + 1-4

CHROMA PROGRAMMER